



Dual Adjustable Lift Off Hinge Adjustment Instructions

HINGE FRONT VIEW

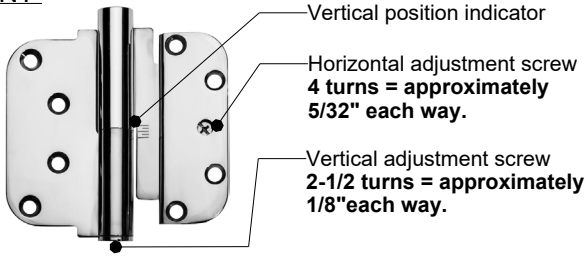

Hinges are preset in the mid-position to allow a 4 way adjustment

Do not use power tools. Only use a Phillips hand screwdriver and a 1/4" Hex key.

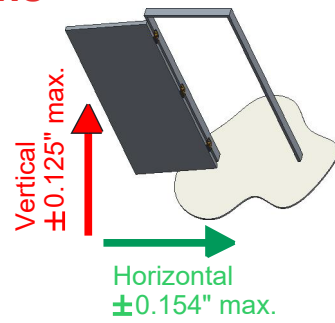



1. Vertical Adjustment



MOVEMENT TO BE OBSERVED ON THE VERTICAL INDICATOR

Center Hinge.



To raise the door panel by 1/16", turn the Hex key a little over a full turn. Monitor the position of the 3 line markers on the indicator. Adjusting the door up, you may also see a gap on the top and bottom hinges.

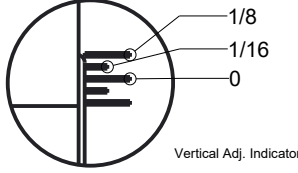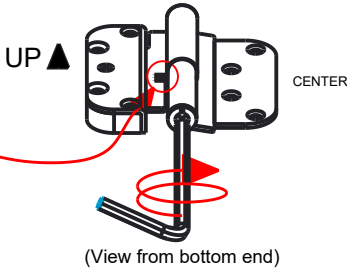

MOVEMENT TO BE OBSERVED ON THE VERTICAL INDICATOR

Center Hinge.

To lower the door panel by 1/16", turn the Hex key a little over a full turn.

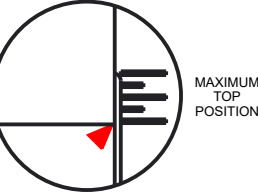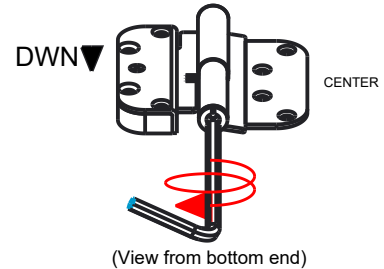


MAXIMUM TOP POSITION



MINIMUM BOTTOM POSITION


Top and Bottom Hinge

Repeat the same number turn on the Top and Bottom hinges. Check that the line markers on the top and bottom hinges match the adjusted center hinge line marker. Do not exceed the line markers during adjustment.

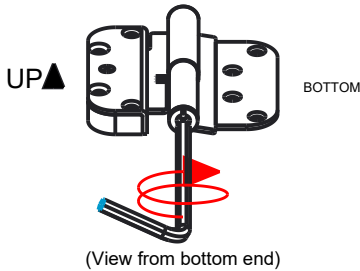


Top and Bottom Hinge

Repeat the same number of turn on the Top and Bottom hinges. The door will start to move down when adjusting the last hinge. Check that the line markers on the top and bottom hinges match the adjusted center hinge line marker.

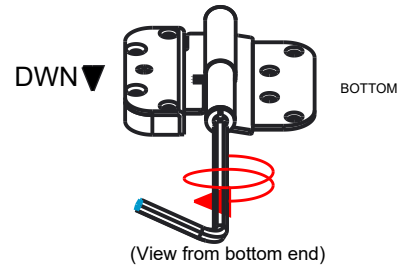

2. Horizontal Adjustment

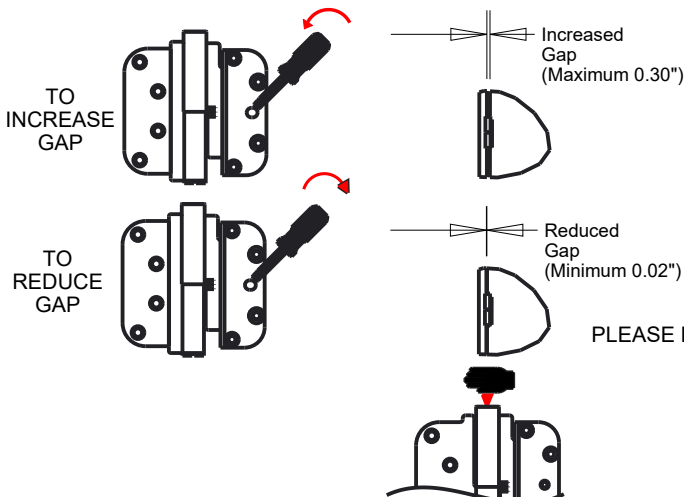

Adjust hinges as needed. Only 4 turns max are needed each way to either close or increase the gap.

PLEASE DO NOT OVERTIGHTEN PAST THE POINT OF RESISTANCE

Gently, push all the sleeves downward if needed to close the gap

