



# INSTALLATION INSTRUCTION

## 4 HANDLE INSTALLATION

INSTALL RUBBER WASHERS ONTO PULL BOSS. INSERT THUMB LATCH TAIL INTO DOOR LATCH HUB SLOT. PLACE THE INTERIOR HANDLE AND THE PULL ASSEMBLIES ON DOOR WITH HAND GRIP TOWARDS GLASS. INSERT THE 2 MOUNTING SCREWS THROUGH PLATES AND TIGHTEN. DO NOT OVER TIGHTEN.

## 3 ASSEMBLE INTERIOR HANDLE

ASSEMBLE THE THUMB LATCH AND LATCH SHIM.

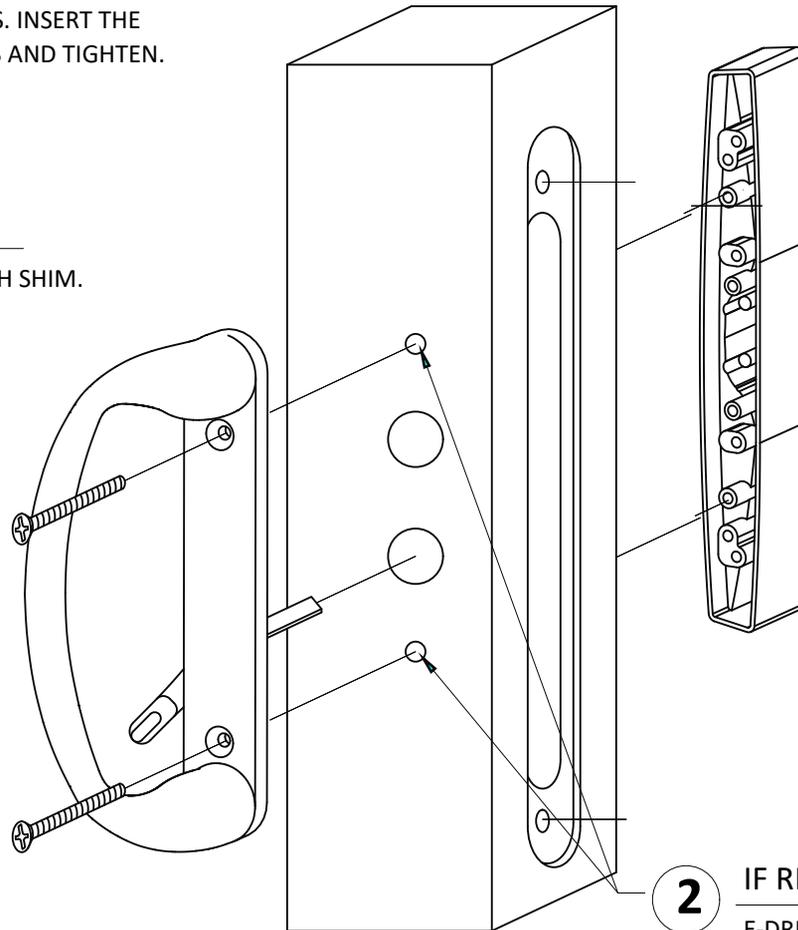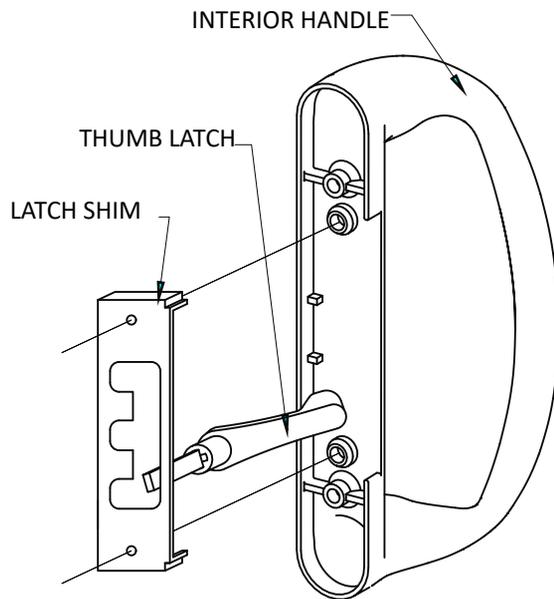

## 1 TOOLS & PARTS REQUIRED

PHILLIPS SCREWDRIVER  
MORTISE LOCK  
FRAME KEEPER

WARNING: ALWAYS USE PROTECTIVE EYE WEAR AND CORRECT HAND TOOLS.  
CARE & MAINTENANCE:  
WARNING: DO NOT CLEAN HARDWARE WITH ANY TYPE OF ABRASIVE CLEANERS, SOLVENTS OR CHEMICALS. ONLY USE A DAMP CLOTH TO WIPE CLEAN.

## 2 IF REQUIRED

E-DRILL SCREW HOLES WITH 1/4" DRILL, DRILL FROM EXTERIOR OF DOOR.