


1) Measure the thickness of the door.


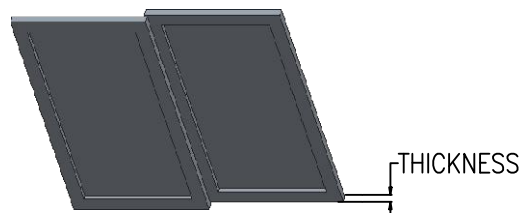


Door thickness is $1.5" \pm \frac{1}{16}"$ $\longleftrightarrow$ Use the #8-32, 1-7/8" long screw


Door thickness is $1.75" \pm \frac{1}{16}"$ $\longleftrightarrow$ Use the #8-32, 2-1/8" long screw

Door thickness is $1.88" \pm \frac{1}{16}"$ $\longleftrightarrow$ Use the #8-32, 2-7/25" long screw

INTERIOR

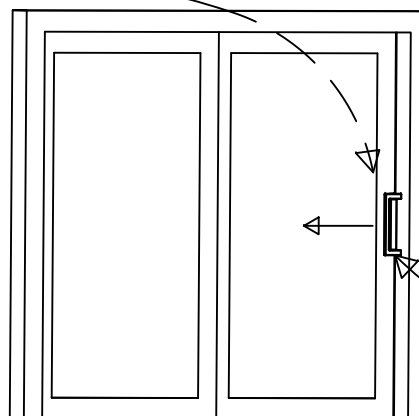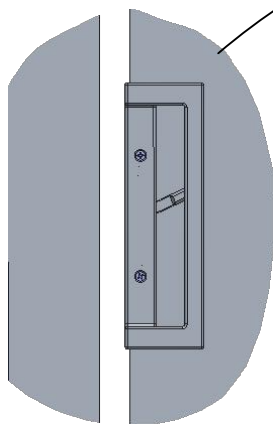

EXTERIOR

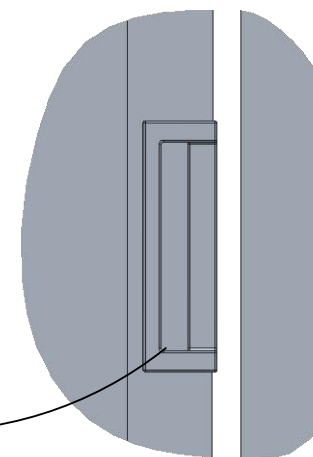

Installation Instruction


2) Insert the thumbblatch into the lock drive hub.

Attach the Internal and External handles onto the door.

Fasten with the #8-32 screws identified at step 1, through the interior handle.

Test the operation.

Do not overtighten the screws.

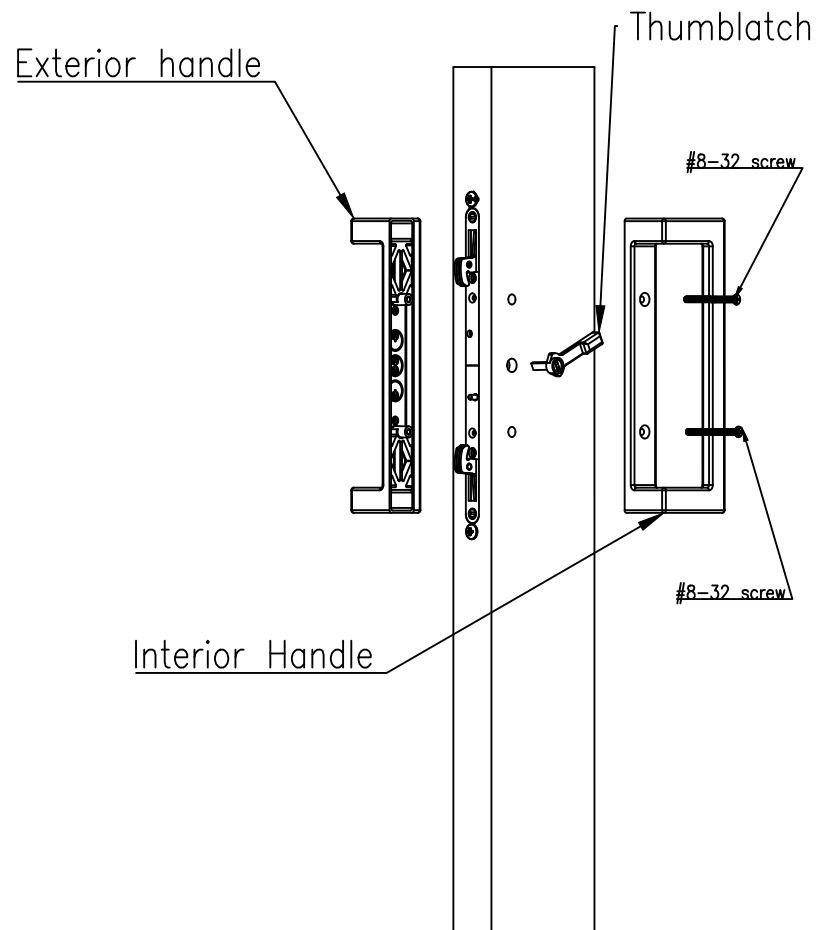

Installation Instruction